




Anker 2.4G Wireless Mouse Scroll Wheel Replacement

This guide will show you how to disassemble your Anker mouse to repair that pesky scroll wheel with little to no experience required.

Written By: Vincent Lee

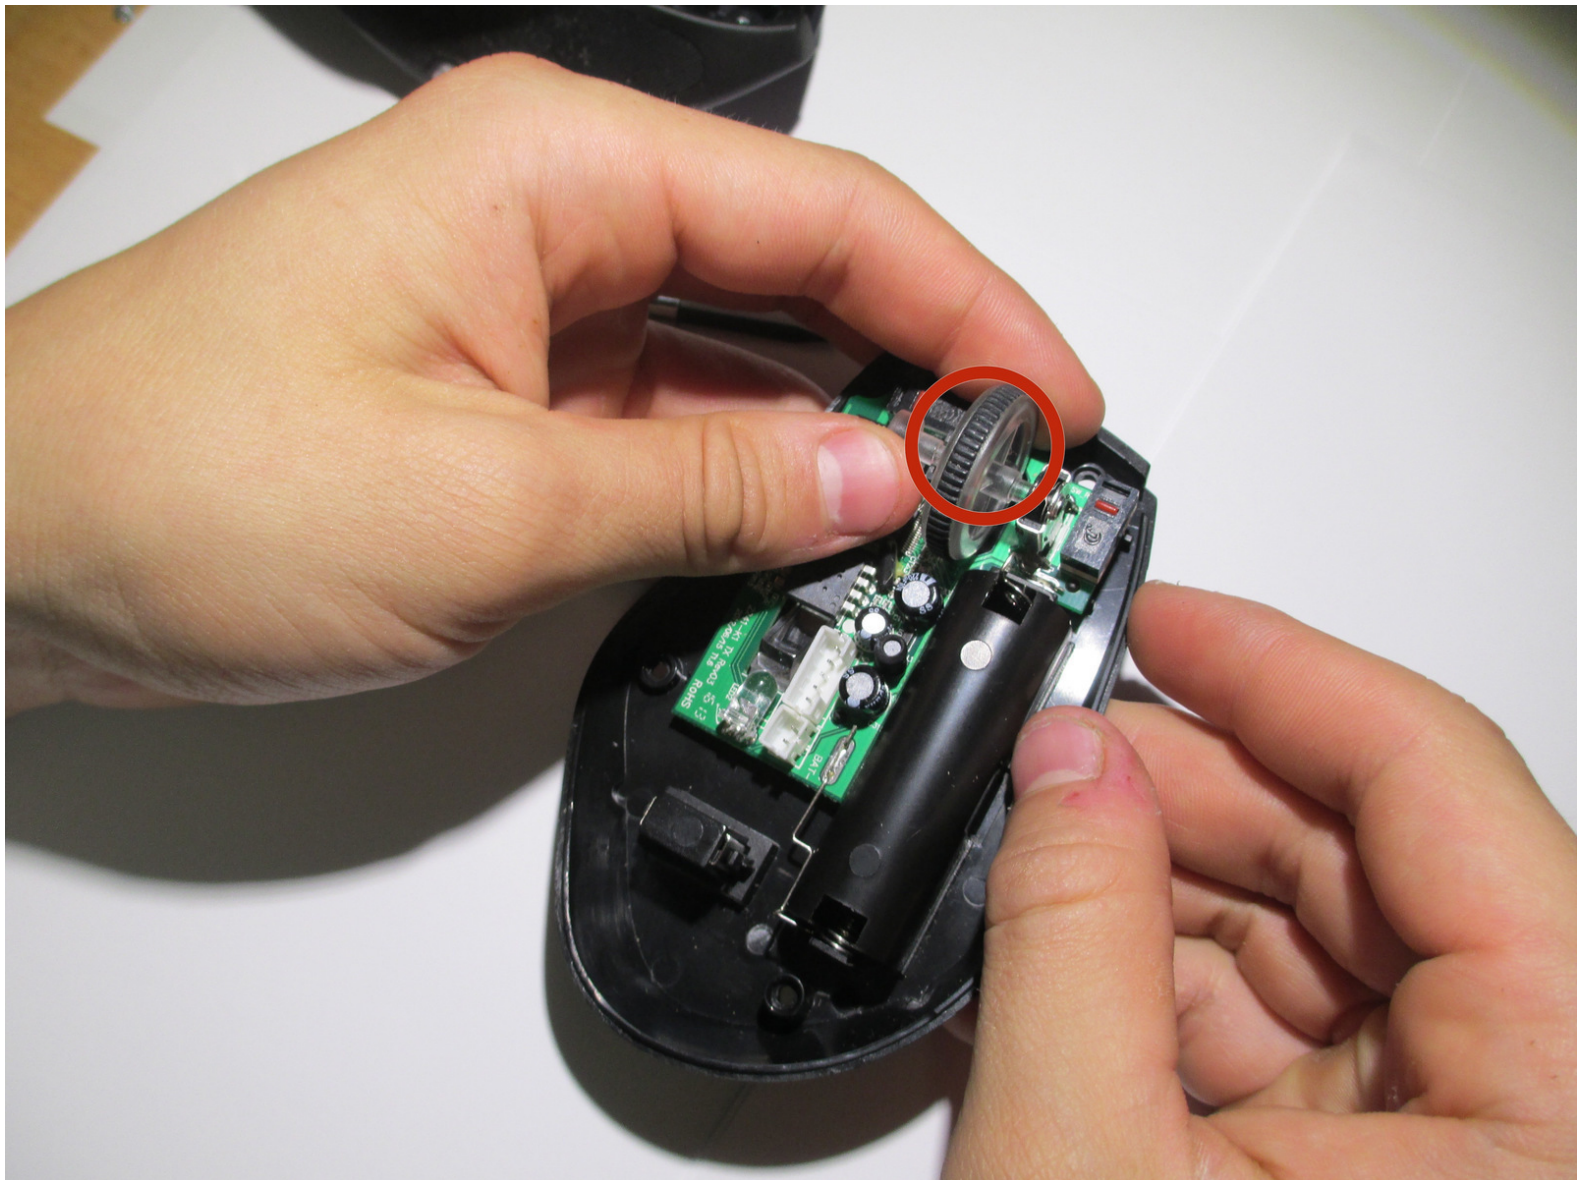

INTRODUCTION

This mouse was designed with usability in mind taking little to no effort to fix anything.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Soldering Station](#) (1)
- [Desoldering Braid](#) (1)
- [Q-Tips](#) (1)



PARTS:

- [Mouse buttons](#) (1)

Step 1 — Scroll Wheel

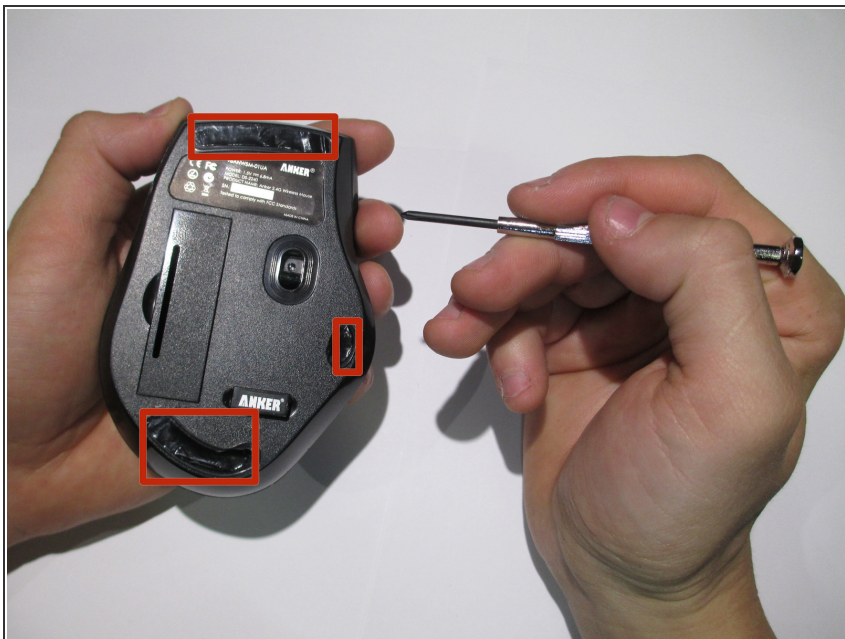

- Use the screwdriver to remove the stickers hiding the screws marked in red.

Step 2



- Remove the 4 screws to continue.

Step 3



- Pry the center of the mouse apart to separate the upper and lower housing of the boards.



Step 4



- Remove the wires from the white crimp headers. This will separate the upper and lower housing units of the mouse.

 Don't pull the wires too hard, as they might break.

Step 5

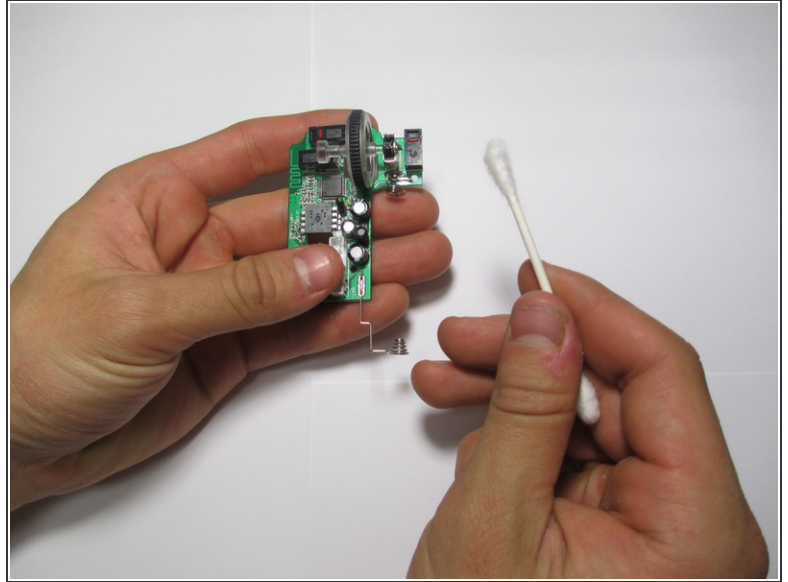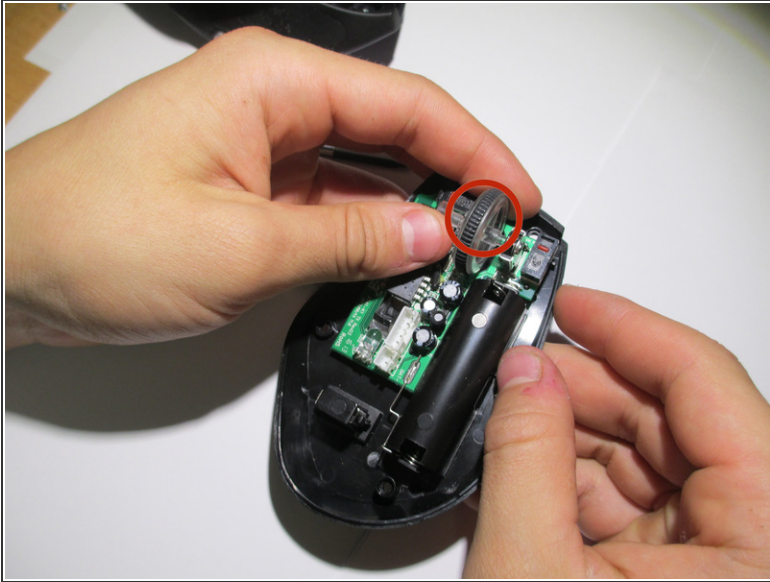


- Pull the Scroll wheel, in red, to the left to remove it.

⚠ This may take some force to remove. Make sure to pull it parallel to the board, instead of perpendicularly.

- Replace/clean if needed.
- If your mouse still doesn't work after this step, please continue onto the next step.

Step 6

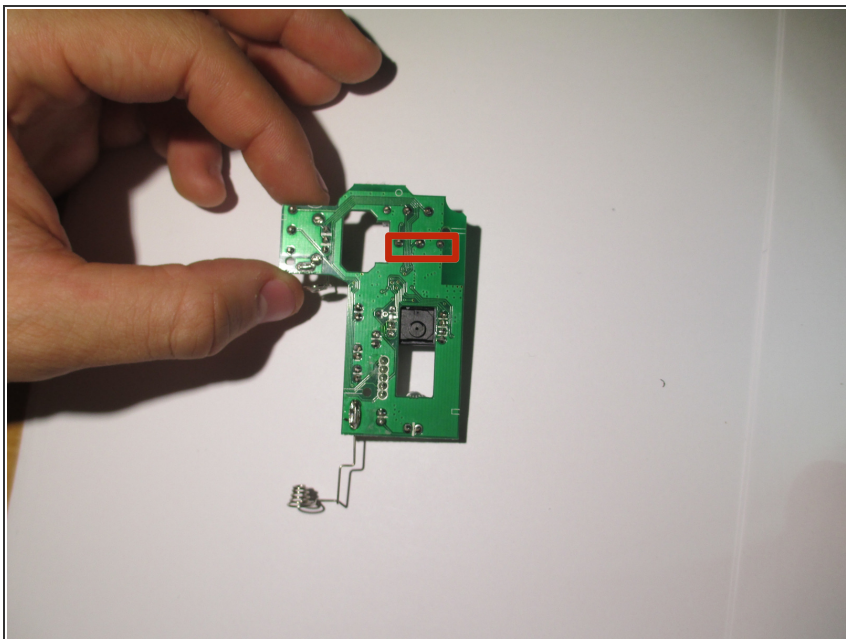

- Desolder these 3 pins and solder the replacement part in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 04:23:28 PM.